

COOLMASTER *OffRoad*

Fitting Instructions

Part Nº **49476K**



Kit contains:

- Extra Large High Flow Cooler
- Cooler Mounting Bracket
- 1.5m 3/8 Cooler Hose
- 1.5m Conduit
- 4 Cooler Hose Clamps
- 4 Cable Ties
- 2 Bols M8x1.25
- 5 Fixed Washer Bolts M6 x 20
- 3 Flat Washers M6x13
- Instructions

1. Remove the grille cover. **(Pic 1)**



Pic 1

2. Slide the cooler kit into place on right handside and secure the top **(Pic 2 & 3)** and bottom bolts **(Pic 4)** as shown.

Washers may be required to space bracket on 6-speed models.



Pic 2




Pic 3



Pic 4

3. Route the cooler hose from the bottom of the new cooler to the top of the existing one. Discard the hose and clamps from the top of the old cooler. **(Pic 5)**

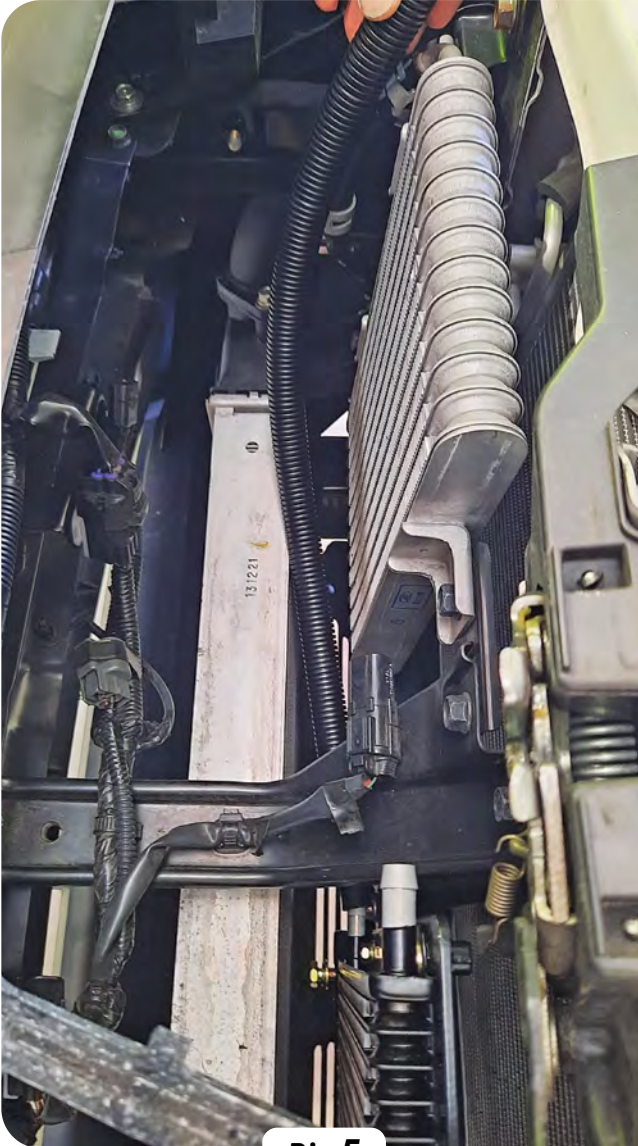

Pic 5



Pic 6

4. Route the cooler hose from the top of the new cooler to the bottom pipe where the old hose was discarded. Be sure not to leave kinks in the hose and tighten clamps. **(Pic 6)**
5. After the installation refill the fluid then carry out a fluid level check (refer to manufacture procedure and oil specifications) and top up as required.
6. Run the engine, check all fitting points for leaks and make sure that hoses are not kinked or squashed.
7. Replace all covers.